

Models Covered In This Manual

Model	Serial Number or Year
All Bravo Models	0M100000 and Above
Sport Master Models	0M052945 and Above

Notice

Throughout this publication, “Dangers,” “Warnings” and “Cautions” (accompanied by the International HAZARD Symbol ) are used to alert the mechanic to special instructions concerning a particular service or operation that may be hazardous if performed incorrectly or carelessly. **OBSERVE THEM CAREFULLY!**

These “Safety Alerts” alone cannot eliminate the hazards that they signal. Strict compliance to these special instructions when performing the service, plus “Common Sense” operation, are major accident prevention measures.

DANGER

DANGER - Immediate hazards which WILL result in severe personal injury or death.

WARNING

WARNING - Hazards or unsafe practices which COULD result in severe personal injury or death.

CAUTION

Hazards or unsafe practices which could result in minor personal injury or product or property damage.

Notice to Users of This Manual

This service manual has been written and published by the Service Department of Mercury Marine to aid our dealers’ mechanics and company service personnel when servicing the products described herein.

It is assumed that these personnel are familiar with the servicing procedures of these products, or like or similar products manufactured and marketed by Mercury Marine, that they have been trained in the recommended servicing procedures of these products which includes the use of mechanics’ common hand tools and the special Mercury Marine or recommended tools from other suppliers.

We could not possibly know of and advise the service trade of all conceivable procedures by which a service might be performed and of the possible hazards and/or results of each method. We have not undertaken any such wide evaluation. Therefore, anyone who uses a service procedure and/or tool, which is not recommended by the manufacturer, first must completely satisfy himself that neither his nor the products safety will be endangered by the service procedure selected.

All information, illustrations and specifications contained in this manual are based on the latest product information available at the time of publication. As required, revisions to this manual will be sent to all dealers contracted by us to sell and/or service these products.

It should be kept in mind, while working on the product, that the electrical system and ignition system are capable of violent and damaging short circuits or severe electrical shocks. When performing any work where electrical terminals could possibly be grounded or touched by the mechanic, the battery cables should be disconnected at the battery.

Any time the intake or exhaust openings are exposed during service they should be covered to protect against accidental entrance of foreign material which could enter the cylinders and cause extensive internal damage when the engine is started.

It is important to note, during any maintenance procedure replacement fasteners must have the same measurements and strength as those removed. Numbers on the heads of the metric bolts and on the surfaces of metric nuts indicate their strength. American bolts use radial lines for this purpose, while most American nuts do not have strength markings. Mismatched or incorrect fasteners can result in damage or malfunction, or possibly personal injury. Therefore, fasteners removed should be saved for reuse in the same locations whenever possible. Where the fasteners are not satisfactory for re-use, care should be taken to select a replacement that matches the original.

We reserve the right to make changes to this manual without prior notification.

Refer to dealer service bulletins for other pertinent information concerning the products described in this manual.

Engine Mechanical Components

Many of the engine mechanical components are designed for marine applications. Unlike automotive engines, marine engines are subjected to extended periods of heavy load and wide-open-throttle operation and, therefore, require heavy-duty components. Special marine engine parts have design and manufacturing specifications which are required to provide long life and dependable performance. Marine engine parts also must be able to resist the corrosive action of salt or brackish water that will rust or corrode standard automotive parts within a short period of time.

Failure to use recommended Quicksilver service replacement parts can result in poor engine performance and/or durability, rapid corrosion of parts subjected to salt water and possibly complete failure of the engine.

Use of parts other than recommended service replacement parts, will void the warranty on those parts which are damaged as a result of the use of other than recommended replacement parts.

Replacement Parts

WARNING

Electrical, ignition and fuel system components on Mercury MerCruiser Engines and Sterndrives are designed and manufactured to comply with U.S. Coast Guard Rules and Regulations to minimize risks of fire or explosion.

Use of replacement electrical, ignition or fuel system components, which do not comply to these rules and regulations, could result in a fire or explosion hazard and should be avoided.

When servicing the electrical, ignition and fuel systems, it is extremely important that all components are properly installed and tightened. If not, any electrical or ignition component opening would permit sparks to ignite fuel vapors from fuel system leaks, if they existed.

Service Manual Outline

Section 1 - Important Information

- A - General Information
- B - Maintenance
- C - Troubleshooting

Section 2 - Removal, Installation and Adjustment

- A - All Models

Section 3 - Sterndrive Unit

- A - Drive Shaft Housing
- B - Gear Housing - Bravo One
- C - Gear Housing - Bravo Two
- D - Gear Housing - Bravo Three

Section 4 - Transom Assembly

- A - Service Procedures Requiring Minor Disassembly
- B - Service Procedures Requiring Major Disassembly

Section 5 - Power Trim

- A - Oildyne Power Trim Pump
- B - Trim Cylinders
- C - Dual Power Trim Control

Section 6 - Steering Systems

- A - Power Steering
- B - Compact Hydraulic Steering

Section 7 - Corrosion Protection

- A - All Models

Important Information

1

Removal, Installation and Adjustment

2

Sterndrive Unit

3

Transom Assembly

4

Power Trim

5

Steering Systems

6

Corrosion Protection

7

IMPORTANT INFORMATION

Section 1A - General Information

How To Use This Manual	1A-2	Sterndrive Unit 10-Hour	
Page Identification	1A-2	Break-In Period	
Introduction	1A-2	(New or With Replacement Gears)	1A-4
Directional References	1A-3	Serial Number Locations	1A-4
Propeller Rotation	1A-3		

IMPORTANT INFORMATION

Section 1B - Maintenance

Torque Specifications	1B-2	Anti-fouling Paint	1B-9
Lubricants / Sealants / Adhesives	1B-2	Steering Head and Remote	
Approved Hydraulic		Control Maintenance	1B-10
Steering Fluids	1B-3	Shift Cable	1B-10
Fluid Capacities	1B-3	Sterndrive Water Drain Holes	1B-11
Special Tools	1B-4	Sterndrive Water Pickups	1B-12
Maintenance Schedules	1B-5	Flushing Attachments	1B-13
Maintenance Intervals	1B-5	Alternative Water Pickups	1B-16
Gas Sterndrive	1B-5	Sterndrive Unit Oil	1B-18
Routine Maintenance	1B-5	Checking	1B-18
Scheduled Maintenance	1B-6	Filling	1B-19
Corrosion	1B-7	Changing	1B-20
Maintaining Ground		Power Package Layup	1B-22
Circuit Continuity	1B-7	Engine	1B-22
Maintaining Anodic Protection	1B-7	Sterndrive	1B-22
Checking Quicksilver		Power Package Recommissioning ...	1B-28
MerCathode System	1B-8	Engine	1B-28
Maintaining Power Package		Sterndrive	1B-28
Exterior Surfaces	1B-8		
Boat Bottom Care	1B-8		

IMPORTANT INFORMATION

Section 1C - Troubleshooting

Troubleshooting	1C-3	Power Trim Electrical System	1C-13
Sterndrive Unit Will Not		Power Trim Pump Motor Will	
Slide Into Bell Housing	1C-3	Not Operate In The OUT/UP	
Sterndrive Unit Does Not Shift		Or IN/DOWN Direction - Solenoids	
Into Gear; Remote Control		Do Not Click	1C-13
Shift Handle Moves	1C-3	Power Trim Pump Motor Will	
Sterndrive Unit Does Not Shift		Not Operate In The OUT/UP	
Into Gear; Remote Control Shift		Or IN/DOWN Direction	
Handle Does Not Move	1C-4	- Both Solenoids Click	1C-14
Sterndrive Unit Shifts Hard	1C-4	Power Trim Pump Motor Operates	
Sterndrive Unit In Gear,		In The OUT/UP Direction,	
Will Not Shift Out Of Gear	1C-4	But Not In The IN/DOWN Direction	
Gear Housing Noise	1C-5	- IN/DOWN Solenoid Does Not Click .	1C-14
Drive Shaft Housing Noise	1C-5	Power Trim Pump Motor Operates	
Power Shift	1C-8	In The OUT/UP Direction,	
System Does Not React	1C-8	But Not In The IN/DOWN Direction	
System Binds	1C-8	- IN/DOWN Solenoid Clicks	1C-15
Performance Troubleshooting	1C-9	Power Trim Pump Motor Operates	
Low WOT Engine RPM	1C-9	In The IN/DOWN Direction, But Not	
High WOT Engine RPM	1C-9	In The OUT/UP Direction	
Propeller Ventilating/Cavitating	1C-9	- Both Trim And Trailer Switches	
Poor Boat Performance		Inoperative - OUT/UP Solenoid	
And/Or Poor Maneuverability		Does Not Click	1C-15
- Bow Too Low	1C-10	Power Trim Pump Motor Operates	
Poor Boat Performance		In The IN/DOWN Direction, But Not	
And/Or Poor Maneuverability		In The OUT/UP Direction - Both Trim	
- Bow Too High	1C-10	And Trailer Switches Inoperative	
Power Steering	1C-11	- OUT/UP Solenoid Clicks	1C-15
Hard Steering - Helm And Cable	1C-11	Trim Control OUT/UP	
Hard Steering (Engine Running)		Trim Switch Inoperative	
- Power Steering System	1C-11	- Trailer Switch Operates	1C-16
Power Steering System External		Trim Control Trailer Switch Inoperative	
Fluid Leaks	1C-11	- Trim OUT/UP Switch Functions	1C-16
Compact Hydraulic Steering	1C-12	Trim System Functions	
Important Information	1C-12	While Unattended	1C-16
Helm Becomes Jammed		Power Trim System Wiring Diagram ..	1C-17
During Filling	1C-12		
System Difficult To Fill	1C-12		
Steering Hard To Turn	1C-12		
Helm Unit Bumpy - Requires			
Too Many Turns	1C-13		

IMPORTANT INFORMATION

Section 1C - Troubleshooting (continued)

Power Trim Hydraulic System	1C-18	Power Trim Hydraulic Schematic	1C-21
Sterndrive Unit Cannot Be Trimmed OUT/UP, Trims Slowly Or With Jerky Movements	1C-18	Corrosion Protection	1C-22
Sterndrive Unit Will Not Stay In Trimmed OUT/UP Position	1C-18	Corrosion On Underwater Parts, Without MerCathode Or Impressed Current Protection	1C-22
Sterndrive Unit Trails OUT/UP On Deceleration Or When Shifting Into Reverse - Unit Thumps When Shifting	1C-18	Corrosion On Underwater Parts, With MerCathode Or Impressed Current Protection - Sterndrive Unit Corroding	1C-23
Oil Foams Out Of Pump Fill/Vent Screw	1C-19	Corrosion On Underwater Parts, With MerCathode Or Impressed Current Protection - Sterndrive Unit Over-protected	1C-25
Sterndrive Unit Cannot Be Lowered From UP Position Or Lowers With Jerky Movements	1C-19	Sterndrive Over-Protected	1C-25
Sterndrive Unit Will Not Stay In Full UP Position For Extended Periods	1C-19	Testing Procedure for Corrosion Protection	1C-26
Sterndrive Will Not Stay In The Trimmed OUT/UP Position When Underway	1C-20	Corrosion Symptoms	1C-26
Sterndrive Unit Trails OUT/UP On Deceleration Or When Shifting Into Reverse - Unit Thumps When Shifting	1C-20	MerCathode Controller	1C-27
Trim Motor Operates But Does Not Pump Oil	1C-20		
Trim Pump Operates Slowly In Both Directions	1C-20		
Trim Pump Operates Slowly With A Laboring Sound	1C-20		

REMOVAL, INSTALLATION AND ADJUSTMENT

Section 2A - All Models

Torque Specifications	2A-2	Transom Assembly Installation	2A-13
Lubricants / Sealants / Adhesives	2A-2	Installing Steering System	2A-20
Special Tools	2A-2	Hydraulic (Helm) Steering	2A-20
Transom Thickness and Surface	2A-3	Steering Helm and Cable	2A-20
Special Information	2A-4	Steering Cable Specifications	2A-21
Bravo Three Notice: Trim-In Limit Insert	2A-4	Power Steering	2A-22
All Models	2A-4	Sterndrive Unit Installation	2A-29
Sterndrive Unit Removal	2A-6	Shift Cable Installation	2A-36
Transom Assembly Removal	2A-8	Troubleshooting Shift Problems	2A-42

STERNDRIVE UNIT

Section 3A - Drive Shaft Housing

<p>Identification 3A-2</p> <p>U-joint and Pinion Gear 3A-2</p> <p>Bravo One 3A-2</p> <p> U-Joint Identification 3A-2</p> <p> Number of Teeth Per Gear</p> <p> - Drive Shaft Housing 3A-2</p> <p>Bravo Two 3A-3</p> <p> U-Joint Identification 3A-3</p> <p> Number of Teeth Per Gear</p> <p> - Drive Shaft Housing 3A-3</p> <p>Bravo Three 3A-3</p> <p> U-Joint Identification 3A-3</p> <p> Number of Teeth Per Gear</p> <p> - Drive Shaft Housing 3A-3</p> <p>Bravo XZ 3A-4</p> <p> U-Joint Identification 3A-4</p> <p> Number of Teeth Per Gear</p> <p> - Drive Shaft Housing 3A-4</p> <p>Bravo XR 3A-4</p> <p> U-Joint Identification 3A-4</p> <p> Number of Teeth Per Gear</p> <p> - Drive Shaft Housing 3A-4</p> <p>Diesel Bravo One X 3A-4</p> <p> U-Joint Identification 3A-4</p> <p> Number of Teeth Per Gear</p> <p> - Drive Shaft Housing 3A-4</p> <p>Diesel Bravo Two X 3A-5</p> <p> U-Joint Identification 3A-5</p> <p> Number of Teeth Per Gear</p> <p> - Drive Shaft Housing 3A-5</p> <p>Diesel Bravo Three X 3A-5</p> <p> U-Joint Identification 3A-5</p> <p> Number of Teeth Per Gear</p> <p> - Drive Shaft Housing 3A-5</p> <p>Specifications 3A-6</p> <p> Bearing Preloads 3A-6</p> <p>Torque Specifications 3A-6</p> <p>Tools 3A-7</p> <p> Special Tools 3A-7</p> <p> Snap-On Tools 3A-8</p> <p>Lubricants / Sealants / Adhesives 3A-9</p>	<p>Drive Shaft Housing Exploded View .. 3A-12</p> <p> Complete Housing 3A-12</p> <p> Clutch Assembly 3A-14</p> <p> Shifter Assembly 3A-15</p> <p> Standard Bravo U-joint Assembly 3A-16</p> <p> Bravo X, XZ, XR and Diesel</p> <p> Bravo U-joint Assembly 3A-17</p> <p>Drive Shaft Housing and Gear Case Separation 3A-18</p> <p> Sterndrive Unit Gear</p> <p> Ratio Identification 3A-18</p> <p>Drive Shaft Housing Disassembly 3A-21</p> <p>Shifter Repair 3A-26</p> <p>Shifter Inspection 3A-29</p> <p>Shifter Reassembly 3A-30</p> <p>U-joint and Pinion Gear 3A-35</p> <p> Inspection 3A-35</p> <p> Disassembly 3A-36</p> <p> Reassembly 3A-39</p> <p>Gear Disassembly, Inspection and Reassembly 3A-47</p> <p> Disassembly 3A-47</p> <p> Inspection 3A-49</p> <p> Reassembly 3A-49</p> <p>Drive Shaft Housing and Top Cover - Bearings and Bearing Sleeves 3A-52</p> <p> Inspection 3A-52</p> <p> Bearing Sleeve Removal</p> <p> (Top Cover) 3A-53</p> <p> Bearing Sleeve Removal</p> <p> (Drive Shaft Housing) 3A-54</p> <p> Roller Bearing Removal 3A-55</p> <p> Steel Bearing Adaptor Removal 3A-57</p> <p> Steel Bearing Adapter Installation 3A-58</p> <p> Bearing Sleeve Installation 3A-59</p> <p> Roller Bearing Installation 3A-60</p> <p>Drive Shaft Housing Reassembly 3A-63</p> <p> Torque Conversion Chart For</p> <p> U-joint Retainer Nut Tool 3A-67</p> <p> Torquing Bravo U-joint Bearing</p> <p> Retainer Nut 3A-68</p> <p>Drive Shaft Housing To Gear Case Installation 3A-74</p>
---	---

STERNDRIVE UNIT

Section 3B - Gear Housing - Bravo One

<p>Torque Specifications 3B-2</p> <p>Specifications 3B-2</p> <p style="padding-left: 20px;">Bearing Preloads 3B-2</p> <p style="padding-left: 20px;">Gear Ratio - Teeth Per Gear (Gear Housing) 3B-2</p> <p>Lubricants / Sealants / Adhesives 3B-3</p> <p>Special Tools 3B-4</p> <p>Bravo One Gear Housing</p> <p style="padding-left: 20px;">Exploded Views 3B-8</p> <p style="padding-left: 40px;">Drive Shaft Components 3B-8</p> <p style="padding-left: 40px;">Bravo One and Diesel Bravo One X Propeller Shaft Components 3B-10</p> <p style="padding-left: 40px;">Bravo XZ and Bravo XR Propeller Shaft Components 3B-12</p> <p style="padding-left: 40px;">Super SportMaster Gear Housing And Drive Shaft Components 3B-14</p> <p>Pre-Disassembly Inspection 3B-16</p> <p>Drive Shaft Housing and Gear Housing Separation 3B-17</p> <p>Gear Housing Disassembly 3B-19</p> <p>Drive Shaft And Pinion Bearing 3B-25</p> <p style="padding-left: 20px;">Inspection and Cleaning 3B-25</p> <p style="padding-left: 20px;">Drive Shaft Disassembly 3B-26</p> <p style="padding-left: 20px;">Pinion Bearing Removal 3B-27</p> <p style="padding-left: 20px;">Pinion Bearing Installation 3B-28</p> <p style="padding-left: 20px;">Drive Shaft Reassembly 3B-30</p>	<p>Bearing Carrier 3B-32</p> <p style="padding-left: 20px;">Inspection 3B-32</p> <p style="padding-left: 20px;">Bearing Carrier Disassembly 3B-32</p> <p style="padding-left: 20px;">Bearing Carrier Reassembly 3B-33</p> <p>Propeller Shaft 3B-34</p> <p style="padding-left: 20px;">Inspection 3B-34</p> <p style="padding-left: 20px;">Propeller Shaft Bearing Removal 3B-34</p> <p style="padding-left: 20px;">Propeller Shaft Bearing Installation ... 3B-35</p> <p>Driven Gear Bearing 3B-36</p> <p style="padding-left: 20px;">Inspection 3B-36</p> <p style="padding-left: 20px;">Driven Gear Bearing Removal 3B-36</p> <p style="padding-left: 20px;">Driven Gear Bearing Installation 3B-37</p> <p style="padding-left: 20px;">Driven Gear Bearing Cup Removal and Inspection 3B-38</p> <p style="padding-left: 20px;">Driven Gear Bearing Cup Installation 3B-39</p> <p>Speedometer Water Passage 3B-40</p> <p style="padding-left: 20px;">Pickup Inspection and Cleaning 3B-40</p> <p style="padding-left: 20px;">Water Passage Seal Replacement ... 3B-41</p> <p>Gear Housing Reassembly And Shimming 3B-42</p> <p>Bravo XZ and XR Heavy Duty Propeller Shaft 3B-59</p> <p style="padding-left: 20px;">Gear Housing Disassembly/Reassembly 3B-59</p> <p style="padding-left: 20px;">Installing The Bearing Carrier 3B-59</p> <p style="padding-left: 20px;">Installing The Standard Propeller Hub Assembly 3B-61</p>
--	--

STERNDRIVE UNIT

Section 3C - Gear Housing - Bravo Two

Specifications	3C-2	Bearing Carrier	3C-28
Bearing Preloads	3C-2	Inspection	3C-28
Special Measurements	3C-2	Disassembly	3C-28
Gear Ratio - Teeth per Gear (Gear Housing)	3C-2	Reassembly	3C-30
Torque Specifications	3C-2	Propeller Shaft	3C-33
Lubricants / Sealants / Adhesives	3C-3	Inspection	3C-33
Special Tools	3C-3	Propeller Shaft Bearing Removal	3C-34
Torque Conversion Chart For Bearing Carrier	3C-8	Propeller Shaft Bearing Installation	3C-35
Torque Conversion Chart For Bearing Retainer Nut	3C-9	Driven Gear Bearing	3C-36
Bravo Two Gear Housing		Inspection	3C-36
Exploded View	3C-10	Driven Gear Bearing Removal	3C-36
Drive Shaft and Propeller Shaft Components	3C-10	Driven Gear Bearing Installation	3C-37
Pre-Disassembly Inspection	3C-12	Driven Gear Bearing Cup Removal and Inspection	3C-38
Drive Shaft Housing		Driven Gear Bearing Cup Installation	3C-39
and Gear Housing Separation	3C-13	Speedometer Water Passage	3C-40
Gear Housing Disassembly	3C-14	Pickup Inspection and Cleaning	3C-40
Drive Shaft and Pinion Bearing	3C-21	Water Passage Seal Replacement	3C-40
Inspection and Cleaning	3C-21	Gear Housing Reassembly	
Drive Shaft Disassembly	3C-21	and Shimming	3C-41
Pinion Bearing Removal	3C-23	Propeller Installation	3C-57
Pinion Bearing Installation	3C-24		
Drive Shaft Reassembly	3C-26		

STERNDRIVE UNIT

Section 3D - Gear Housing - Bravo Three

Specifications	3D-2	Propeller Shaft	3D-31
Bearing Preloads	3D-2	Inspection	3D-31
Gear Backlash	3D-2	Disassembly	3D-31
Pinion Gear Clearance	3D-2	Propeller Shaft Spline Lash Check ...	3D-33
Propeller Shaft End Play	3D-2	Outer Propeller Shaft Servicing	3D-34
Gear Ratio - Teeth per Gear (Gear Housing)	3D-2	Front Driven Gear And Bearing	3D-36
Torque Specifications	3D-3	Inspection	3D-36
Torque Conversion Chart For Bearing Carrier	3D-4	Bearing Removal	3D-36
Torque Conversion Chart For Bearing Retainer Nut	3D-5	Bearing Installation	3D-37
Torquing Outer Prop Shaft Bearing Retainer and Bearing Carrier	3D-5	Bearing Cup Removal	3D-38
Lubricants / Sealants / Adhesives	3D-6	Bearing Cup Installation	3D-39
Special Tools	3D-7	Bearing Carrier Seal And Bearing	3D-40
Bravo Three Gear Housing		Inspection	3D-40
Exploded View	3D-13	Removal	3D-40
Drive Shaft and Propeller Shaft Components	3D-13	Installation	3D-41
Pre-Disassembly Inspection	3D-15	Speedometer Water Passage	3D-43
Drive Shaft Housing and Gear Housing Separation	3D-16	Inspection and Cleaning	3D-43
Gear Housing Disassembly	3D-18	Seal Removal	3D-43
Drive Shaft And Pinion Bearing	3D-26	Seal Installation	3D-44
Inspection and Cleaning	3D-26	Gear Housing Reassembly and Shimming	3D-44
Drive Shaft Disassembly	3D-26	Checking Backlash	3D-53
Drive Shaft Reassembly	3D-27	Installing Gear Housing On Drive Shaft Housing	3D-63
Pinion Bearing	3D-28	Propeller Installation	3D-65
Removal	3D-28		
Installation	3D-29		

TRANSOM ASSEMBLY

Section 4A - Service Procedures Requiring Minor Disassembly

Bravo Transom Assembly		Gimbal Bearing	4A-26
Specifications	4A-2	Inspection	4A-27
Torque Specifications	4A-2	Removal	4A-27
Lubricants / Sealants / Adhesives	4A-2	Installation	4A-29
Special Tools	4A-3	Shift Cable	4A-33
Bravo Transom Assembly		Removal	4A-33
Exploded Views	4A-6	Shift Cable Installation	4A-34
Inner Transom Plate Components	4A-6	Exhaust Bellows (If Equipped)	4A-39
Bell Housing Components	4A-7	Removal	4A-39
Gimbal Ring Components	4A-8	Cleaning and Inspection	4A-39
Gimbal Housing Components	4A-10	Installation	4A-40
Special Information	4A-12	Exhaust Tube (If Equipped)	4A-42
Trim Limit Switch	4A-12	Removal	4A-42
Trim Position Sender	4A-12	Cleaning and Inspection	4A-42
Removal	4A-12	Installation	4A-43
Installation	4A-17	Water Hose and Water Fitting	4A-44
Trim Position Sender and		Removal	4A-44
Switch Installation	4A-22	Installation	4A-45
High Performance Transom		Crimp Clamp Tool	4A-47
Assembly - Without Electrical			
Trim Sender and Trim Limit Switch ..	4A-25		

TRANSOM ASSEMBLY

Section 4B - Service Procedures Requiring Major Disassembly

Bravo Transom Assembly		Gimbal Housing Servicing	4B-30
Specifications	4B-2	U-joint Bellows Replacement	4B-30
Parts List	4B-2	Shift Cable Bellows Replacement	4B-33
Torque Specifications	4B-2	Exhaust Bellows Replacement	4B-36
Lubricants / Sealants / Adhesives	4B-3	Speedometer Hose Replacement	4B-38
Tools	4B-3	Gear Lube Monitor	
Special Tools	4B-4	System Components	4B-40
Snap-On Tools	4B-5	Trim Position Sender and Trim	
Bravo Transom Assembly		Limit Switch Wire Replacement	4B-42
Exploded Views	4B-6	Gimbal Ring / Swivel Shaft	
Inner Transom Plate Components	4B-6	and Steering Lever Installation	4B-44
Bell Housing Components	4B-7	Bell Housing Installation	4B-51
Gimbal Ring Components	4B-8	Standard Transom Assembly	4B-51
Gimbal Housing Components	4B-10	High Performance Transom	
Bell Housing Removal	4B-12	Assembly	4B-53
Access Plug Kit Installation	4B-17	Standard And High Performance	
Gimbal Ring, Swivel Shaft,		Transom Assemblies	4B-55
and Steering Lever Removal	4B-19	Shift Cable Installation	4B-60
Gimbal Ring Servicing	4B-23	Crimp Clamp Tool	4B-64
Gimbal Ring Identification	4B-23	Bravo Access Plug	
Bushing Removal	4B-23	Drilling Template	4B-65
Install Bushings	4B-25		

POWER TRIM

Section 5A - Oildyne Power Trim Pump

Specifications	5A-2	Trim Pump Removal	5A-29
Valve Pressure Specifications	5A-2	Hydraulic Repair	5A-30
Electrical Specification	5A-2	Disassembly	5A-30
Torque Specification	5A-2	Filter Replacement	5A-32
Lubricants / Sealants / Adhesives	5A-2	UP Pressure Relief Valve	
Special Tools	5A-3	Replacement	5A-33
Tools	5A-3	DOWN Pressure Relief	
Exploded Views	5A-4	Valve Replacement	5A-35
Trim Pump	5A-4	Thermal Relief Valve Replacement ...	5A-36
Later Model Trim Pump		Pump Replacement	5A-37
And Bracket Hardware	5A-6	Adapter Replacement	5A-38
Maintaining Power Trim Pump		Adapter Repair	5A-41
Oil Level	5A-8	Pump Shaft Oil Seal Replacement ...	5A-44
Air Bleeding Power Trim System	5A-9	Motor Repair	5A-47
Bleeding OUT/UP Trim Circuit	5A-9	Disassembly	5A-47
Bleeding IN/DOWN Trim Circuit	5A-10	Armature Tests	5A-51
Testing Power Trim Pump	5A-11	Continuity Test	5A-51
Test Gauge	5A-11	Test For A Shorted Circuit	5A-51
Internal Restriction Test	5A-13	Cleaning Commutator	5A-51
OUT/UP Pressure Test	5A-13	Field Tests	5A-52
IN/DOWN Pressure Test	5A-14	Test for Open Circuit	5A-52
Trim Pump Hydraulic System	5A-15	Test for Shorted Circuit	5A-53
Trim Cylinder Internal Leak Test	5A-16	Thermal Switch Continuity Test	5A-54
Trim Cylinder Shock Piston Test	5A-19	Brush Replacement	5A-55
Motor and Electrical Bench Tests	5A-20	Reassembly	5A-59
Trim Pump Motor Test (In Boat)	5A-20	Installation	5A-65
OUT/UP Operation	5A-20	Trim Pump Wiring Diagrams	5A-66
IN/DOWN Operation	5A-21	Model With Three-Button	
Trim Pump Motor Test (Out of Boat) ..	5A-22	Trim/Trailer Panel	5A-66
OUT/UP Operation	5A-22	Model With Trim In Handle	
IN/DOWN Operation	5A-22	and Trailer Switch Separate	5A-67
Solenoid Test (Pump In Boat)	5A-23		
UP/OUT Solenoid	5A-23		
IN/DOWN Solenoid	5A-24		
Solenoid Test (Pump Out of Boat)	5A-24		
OUT/UP Solenoid	5A-25		
IN/DOWN Solenoid	5A-26		
110 Amp Fuse Test (Pump in Boat) ..	5A-27		
110 Amp Fuse Test			
(Pump Out of Boat)	5A-28		
20 Amp Fuse Test	5A-28		

POWER TRIM

Section 5B - Trim Cylinders

Specifications	5B-2	Special Information	5B-6
Torque Specifications	5B-2	Bravo Three Notice:	
Lubricants / Sealants / Adhesives	5B-2	Trim-In Limit Insert	5B-6
Special Tools	5B-2	Trim Cylinder Internal Leak Test	5B-7
Tools	5B-2	Trim Cylinder Shock Piston Test	5B-7
Exploded Views	5B-3	Trim Cylinder Repair	5B-8
Bravo Trim Cylinders	5B-3	Removal	5B-8
Bravo Trim System Components	5B-4	Disassembly	5B-10
Power Trim Hydraulic Schematic	5B-5	Reassembly	5B-14
		Installation	5B-21

POWER TRIM

Section 5C - Dual Power Trim Control

Lubricants / Sealants / Adhesives	5C-2	Starboard Trim Switch Test	5C-5
Important Information	5C-2	Port Trim Switch Test	5C-5
Testing Dual Power Trim System	5C-2	Dual Power Trim System	
Relay Test	5C-3	Component Repair	5C-6
Testing Relay No. 1	5C-3	Relay Removal	5C-6
Testing Relay No. 2	5C-3	Relay Installation	5C-7
Diode Module Test	5C-3	Diode Module Removal	5C-8
Diode No. 1	5C-3	Diode Module Installation	5C-8
Diode No. 2	5C-3	Trim Control Panel	
Diode No. 3	5C-4	Switch Removal	5C-9
Diode No. 4	5C-4	Trim Control Panel	
Diode No. 5	5C-4	Switch Installation	5C-9
Diode No. 6	5C-4	Wiring Diagrams	5C-10
Diode No. 7	5C-4	Dual Trim	5C-10
Diode No. 8	5C-4	Dual Trim Harness Control Module ...	5C-11
Trailer Switch Test	5C-5		

STEERING SYSTEMS

Section 6A - Power Steering

Parts List	6A-2	Power Steering Pump	6A-22
Torque Specifications	6A-2	Removal	6A-22
Lubricants / Sealants / Adhesives	6A-2	Flow Control Valve Servicing	6A-23
Special Tools	6A-3	Pump Shaft Oil Seal Replacement ...	6A-24
Kent-Moore Tools	6A-3	Disassembly	6A-27
Description	6A-4	Cleaning And Inspection	6A-30
Control Valve	6A-4	Reassembly	6A-30
Power Steering System	6A-5	Installation	6A-37
Steering Helm and Cable	6A-8	Multiple Sterndrive Steering Tie Bar	
Steering Cable Specifications	6A-9	Arrangements	6A-39
Filling and Air Bleeding		Internal Power Steering	
Power Steering System	6A-10	With Internal Tie Bar Only	6A-39
Checking Fluid Level	6A-10	Internal Power Steering With	
Engine Warm	6A-10	Internal and External Tie Bar	6A-39
Engine Cold	6A-11	External Power Steering	6A-39
Filling and Bleeding	6A-12	External Power Steering With	
Power Steering Assembly	6A-13	Low External Tie Bar	6A-39
Removal	6A-13	Determining Tie Bar Length	6A-40
Installation	6A-14	Tie Bar Selection	6A-41
Power Steering System Pressure ...	6A-17	Tie Bar Installation	6A-41
Pump Pressure Test	6A-20		

STEERING SYSTEMS

Section 6B - Compact Hydraulic Steering

Important Information About Through the Transom Exhaust	6B-2	Connecting The Clevis	6B-13
Torque Specifications	6B-2	Hydraulic Fluid Level	6B-14
Lubricants / Sealants / Adhesives	6B-2	Setting Fluid Level	6B-14
Introduction	6B-3	Maintaining Fluid Level	6B-14
Through the Transom Exhaust	6B-3	System Check	6B-14
Removal	6B-4	Maintenance	6B-15
Installing The Steering Cylinder	6B-6	Troubleshooting Guide	6B-15
Filling And Purging The System	6B-9	Important Information	6B-15
Twin Station and/or Twin Cylinder	6B-9	Troubleshooting Chart	6B-16
Single Station With Single Cylinder	6B-9	Standard Tilt Helm Mounting Template	6B-18
Purging	6B-11		

CORROSION PROTECTION

Section 7A - All Models

Torque Specifications	7A-2	Corrosion Protection Testing and Troubleshooting	7A-19
Lubricants / Sealants / Adhesives	7A-2	Continuity Test	7A-22
Special Tools	7A-2	Test Equipment Set-Up	7A-23
General Information	7A-4	Low Readings	7A-24
Continuity Circuit	7A-5	High Reading	7A-26
Trim Cylinder Anodes	7A-8	Normal Reading But Corrosion is Evident	7A-26
Anodic Plate	7A-9	Corrosion On The Entire Sterndrive Unit	7A-26
Bravo One Sterndrive Units	7A-9	Corrosion Problem Developed After Refinishing The Sterndrive Unit	7A-26
Bravo Two Sterndrive Units	7A-11	Paint Blistering On Sterndrive Unit	7A-26
Bravo Three Sterndrive Units	7A-11	Trim Cylinder Corroding Only One Or Two Components Corroding	7A-27
Integral MerCathode System	7A-12	Corrosion In The Exhaust Outlet Area	7A-27
Removing Gimbal Mounted MerCathode Assembly	7A-13	Corrosion Occurs After The Unit Is Removed From The Water	7A-27
Installing Gimbal Mounted MerCathode System	7A-14	Corrosion Between Surfaces Aluminum Corroding In Lubricated Areas	7A-27
Connect to MerCathode Controller Assembly	7A-17	Stainless Steel Components Corroding	7A-28
Wiring Diagrams	7A-17	Stainless Steel Propeller Corroding	7A-28
MerCathode Controller - Standard Models	7A-17	Paint Blistering - The Metal Under The Blistered Paint Is Not Pitted	7A-28
MerCathode Controller - Quick Connect Models	7A-18		
Galvanic Isolator	7A-18		
